 


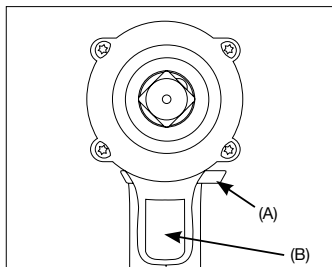


Hi & Lo Torque Mode Forward Rotation (Clockwise)

- Select forward (clockwise) mode on the forward & reverse switch, located above the trigger. (A)
- Slowly depress the trigger (B) and a green light will appear, on the base of the wrench, to indicate either Hi or Lo torque mode.

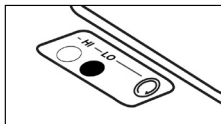

- Hi or Lo torque can be selected in forward (clockwise) mode. Simply press the green button on the base of the wrench, to switch to your preferred choice. (C)
- When in forward (clockwise) mode the last setting used (Hi or Lo) will remain programmed.

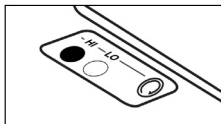

WARNING!

Do not operate the Forward/Reverse lever until the tool comes to a complete stop



CAUTION!

When using threaded fastenings, start the fastening onto the first few threads by hand before using the wrench. This will help ensure that the fastening does not become cross-threaded.

Please note: In reverse (anti-clockwise) the tool will always be in Hi torque mode. Lo torque mode cannot be selected.